

T-REX

Billet Grilles

25168

2008 CHEVY
MALIBU

25168

2008 CHEVY
MALIBU

1 PC BILLET GRILLE **2008 CHEVY MALIBU**

Recommended Tools:

Philips/Slotted Screwdriver
8MM, 10MM Wrench or Nut Driver


Parts List / Hardware:

- 1 Billet Insert
- 2 4" Flange Brackets
- 2 6/32 Nylon Lock Nuts
- 2 6/32 x 2 1/2" Machine Screws

Read and understand instructions before attempting installation

Step 1

Remove the plastic clips and 10mm bolts to remove the lower motor shroud to allow access to the back of the stock grill.

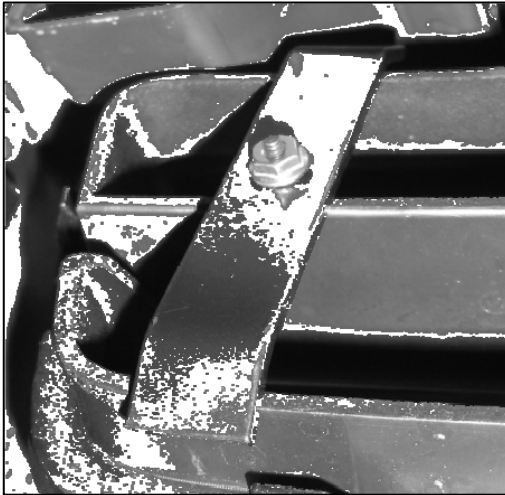

Step 2

Insert the lower grille insert. Make sure that the billet is centered. Place a screw through the front bracket, through the factory backing and into the flange bracket and nylon lock nut (1). Tighten the screws and nylon lock nuts till snug.

Step 4

Re-install the lower motor shroud to the vehicle using the factory hardware.

Thank you for purchasing your T-Rex billet grille. 4/09/08