

T-REX

Billet Grilles

25789

**05-08 NISSAN
FRONTIER**

25789

**05-08 NISSAN
FRONTIER**

2005-08 NISSAN FRONTIER With Chrome Bumpers

Recommended Tools:


Phillips & Slotted Screwdrivers
5/16 Wrench or Nut-Driver

Parts List / Hardware:

1	Bumper Insert (7 Bars)
2	6-32 x 2 Machine Screws
2	6-32 Nylon Lock Nuts
2	#6 Flat Washers
2	1" J Hook Brackets

Read and understand instructions before attempting installation

NOTE: Vehicle must have a CHROME STEEL BUMPER
Use part number 25760 for vehicles with a painted plastic bumper.

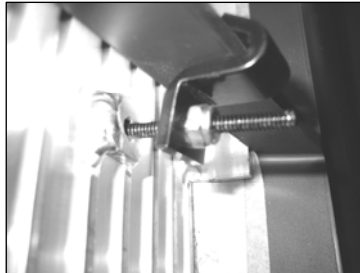

Step 1

Remove the six fasteners holding the top of the grille in place. Pull the grille forward to access the mounting clips on each end; use a slotted screwdriver to unclip the two fasteners on each side. Now remove the grille by depressing the six clips holding the grille to the bumper cover.

Step 2

Install a machine screw into each mounting hole. From the back, slide a J hook bracket and washer onto each machine screw. Thread the Nylon Lock nuts onto the screws by hand. Center the billet into the bumper opening. Make sure the J hooks wrap around the grille mesh. Use a screwdriver and wrench to tighten the hardware. Do not over-tighten the hardware.



Step 2

Re-install the main grille assembly back onto the vehicle.
Thank you for purchasing your T-Rex billet grille. T-Rex Truck Products Inc. 11/18/05